


How to program a Codehopper Remote

1. Turn power off to the unit for 5seconds
2. Turn power back on
3. Push "Program button" twice (eg push,push)

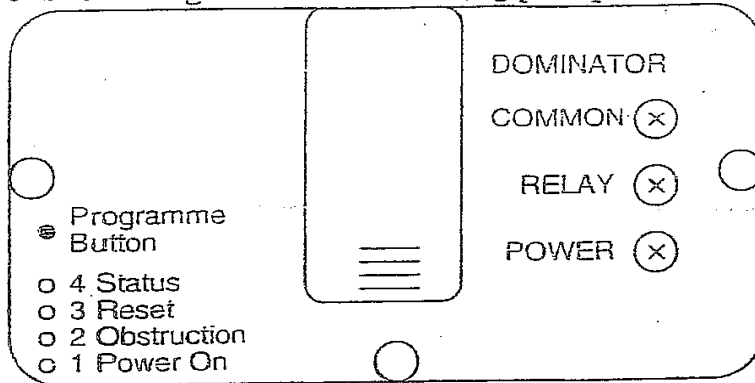

4. All 4 small red lights (LEDS) light up and flash (Status, Reset, Obstruction & Power On lights)
5. When they stop flashing, LED #1 will be on
 - a. If #1 LED is constant (not flashing) it already has a remote coded to it.
 - b. You must then push the "Program" button again once, the #2 LED will come on, if this is also constant (not flashing) it already has a remote coded to it. (Note: Each light represents a remote code)

Keep pushing the "Program" button until one of the LEDs is flashing (this represents an empty code)

- c. Once an LED is flashing push and hold the remote button until the LED stops flashing, then release the remote button.

Wait several seconds and automatically all lights will flash on and off. Once this has happened you can use your remote.

TO WIPE A CODE

1. Turn off power to the unit for 20 seconds
2. Push program button twice (eg push,push)
3. After several seconds all lights will flash on and off. Led 1 will come on.
 - a. If you want to delete the code in LED 1 push and hold the "Program" button down until the light starts to flash ~~the code is now wiped.~~
 - b. You may then by pushing the "Program" button once cycle through each LED light and delete where required.