

# ***ALI-JAMB***

*Aluminium Garage Door Jamb*

## INSTALLATION GUIDE

**NZ Sales & Support:**


Phone: 027 248 3677

Email: [alijambnz@gmail.com](mailto:alijambnz@gmail.com)

[www.alijamb.co.nz](http://www.alijamb.co.nz)


## Step 1 - Position Head Profile

- A. Install corner cleats into head profile. Bend cleat to ensure a tight fit.
- B. Hold head profile up to lintel and install central face screw.
- C. Measure from the concrete rebate to the underside of lintel, Subtract 20mm and cut bottom of legs to length and angle to suit the rebate .  
Or if no concrete rebate cut the bottom of the legs to the required length and angle.

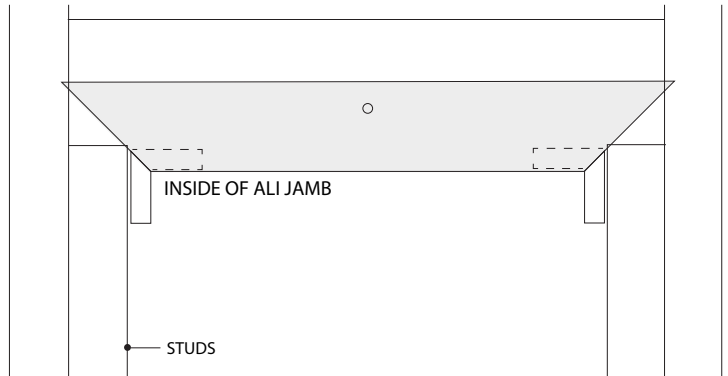


## Step 2 - Fix Side Profiles

- A. Slide side profiles over corner cleat. Bend for tight fit if required.
- B. Level each side and install face screws to side profiles.

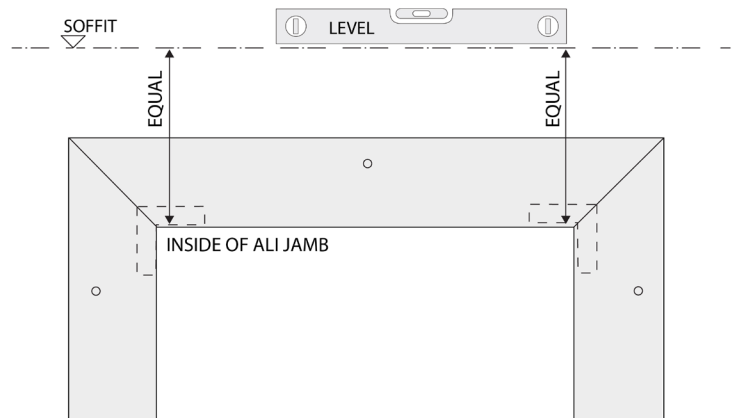


## Step 3 - Plum Head Profile

- A. Remove central screw and allow head profile to sag.
- B. Level head profile to string line or laser level and install face screws to head.

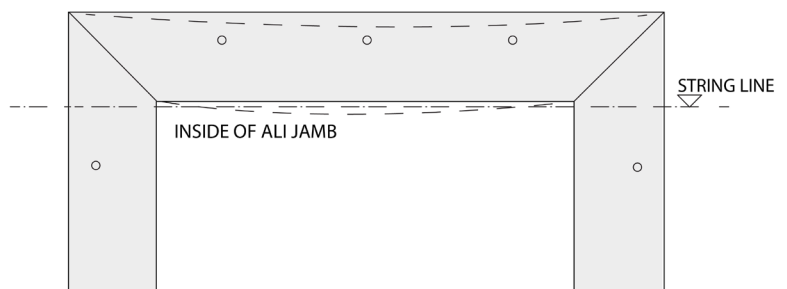


### Step 4 - Install Jamb Clips

- A. Check for plumb outside edge with level and install 2 - 3 clips up each side. No higher than two thirds up sides. Refer details on Step 6 for clip installation position.

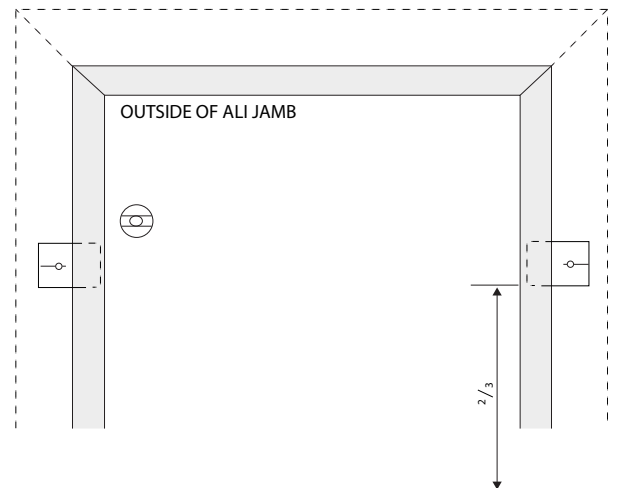

### Step 5 - Install Head Clips

- A. Run string line along and across underside of head profile. Install head clips. 2-6 clips depending on width

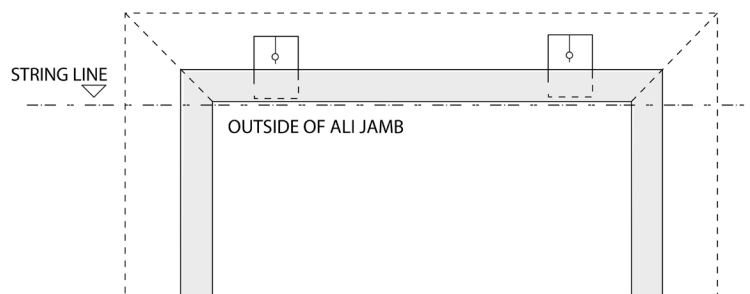

Side Jamb Detail

